



GPRS Stick Datalogger Quick Installation Manual

Version: 3.3




- Delivery Content
- 1 GPRS Stick
 - 1 GPRS Antenna
 - 1 Quick Installation Manual

1 Install

1.1 Install the datalogger

Connect the datalogger to the corresponding 4-pin COM port of the inverter. A Solis 5K inverter is used here as an example. Please follow the instructions below:

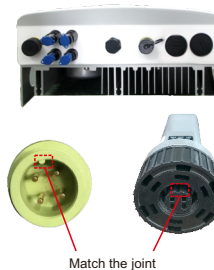

Install the datalogger:

1. Install the antenna to the datalogger.
2. Match the joint, and then insert the datalogger to the inverter COM port.
3. Rotate the black ring in clockwise.

 


NOTE

Only rotate the black ring at the connection end, not rotate the silver cover.

1.2 Install with multiple inverters

If you need to collect data from multiple inverters, please follow the inverter user manual to establish a communication connection with the inverter using the RS485 communication cable in a "daisy chain" manner.



After the datalogger is installed on the inverter, if the inverter is powered on, you need to set the inverter slave address, the default slave address of the inverter is 01, and each inverter on the communication circuit needs to be assigned with different slave address (like 01, 02, 03, 04...).

NOTE

The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lightning storm.

2 LED and Button


LED Lights Status:

LED Indicators	Description	LED Status	Meanings
Internet Indicators (NET)	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server
		ON	Successfully connected
		OFF	Abnormal connection
Inverter COM Indicators (COM)	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter
		ON	Successfully connected
		OFF	Abnormal connection
Power Indicator (PWR)	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally
		OFF	Datalogger is powered up abnormally

Edit message: AT+QICSGP=<mode>,<apn>,<username>,<password> to the number of SIM card. If it works, it will reply "OK".

Description	
<mode>	Default 1
<apn>	The current APN, pls refer to network operator about APN
<username>	APN name, defined by user
<password>	APN password, defined by user

Refer to the figure below as an example.

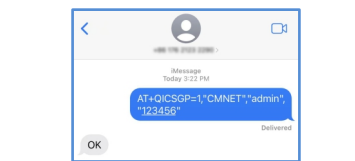


3 Create the Soliscloud Account


Step 1: Use your phone to scan the QR code to download and register the Solis Cloud APP. Or directly download from APP Store or Google Play Store by searching "SolisCloud".




Step 2: Open the APP and click register.

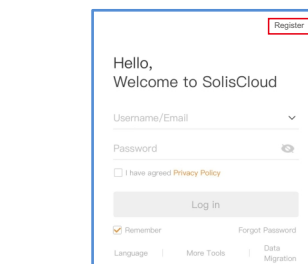

Step 3: Select Owner or Organization for email address registration.

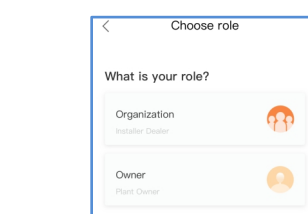



Step 4: Enter the email to get the verification code, then enter your account and password, last click the "Register".

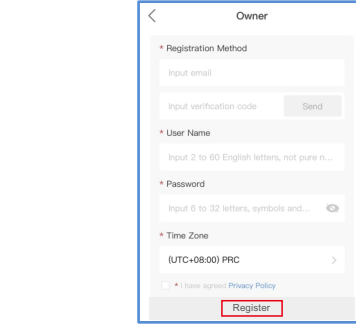

Step 5: Scan the datalogger SN QR code or manually input it.



 Step 6: Plant creation succeeds. Click "Continue...atologger" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

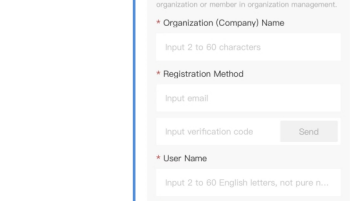


Step 7: Plant creation succeeds. Click "Continue...atologger" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".



4 Create Plant


Step 1: Enter the main page of Solis Cloud APP, click "+" at the top right corner and select "Add plant".

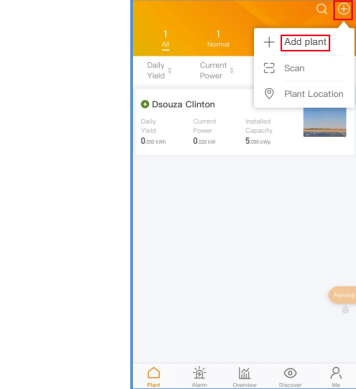

Step 2: Input the information of the plant as required. Then click "Done".







Step 3: Confirm the plant information. Click "Create plant".

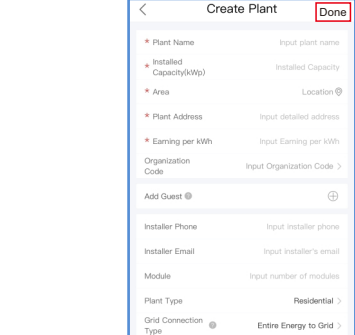

Step 4: Click "View plant" to enter the plant homepage, then add the datalogger.



   
Step 5: Scan the datalogger SN QR code or manually input it.

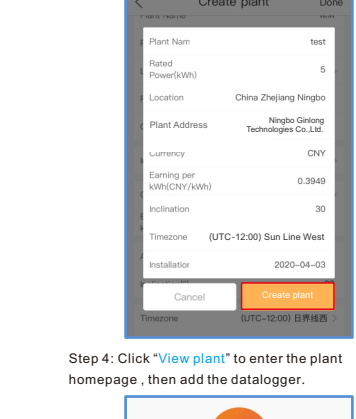


Step 6: Plant creation succeeds. Click "Continue...atologger" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".



Note: Scan the datalogger SN, NOT the inverter SN.

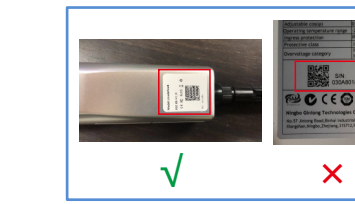

Step 7: Plant creation succeeds. Click "Continue...atologger" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

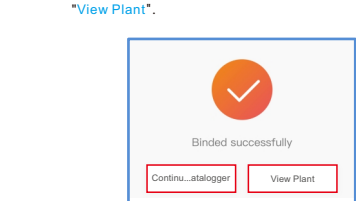

Contact
Please contact us if you have any technical problems in terms of the product. Please provide the following information as well:

- ◆ Inverter SN
- ◆ Datalogger SN
- ◆ Problem Description

Ginlong Technologies Co., Ltd.

No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.

Tel: +86 (0)574 6578 1806

Fax: +86 (0)574 6578 1606

Email: info@ginlong.com

Web: www.ginlong.com