


1. Packing List

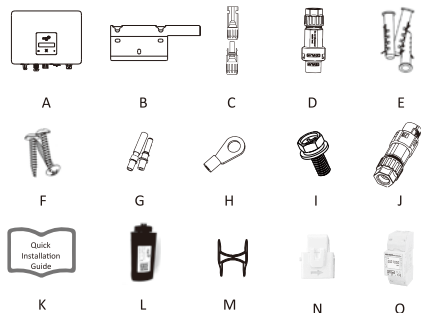


Object	Quantity	Description	Object	Quantity	Description
A	1	Inverter	I	1	Set screw
B	1	Bracket	J	1	Communication connection
C	2	DC connector (F/M)	K	1	Quick installation guide
D	1	AC connector	L	1	WiFi/LAN/GPRS(Optional)
E	3	Expansion tube	M	1	Unlock tool
F	3	Expansion screw	N	1	CT(Optional)
G	2	DC pin contact (1*positive, 1*negative)	O	1	Meter(Optional)
H	1	Earth terminal			

- Push the threaded sleeve to connection terminal until both are locked tightly on the inverter.



- Remove the AC connector, press the bayonet out of the slot with a small screwdriver or the unlock tool and pull it out, or unscrew the threaded sleeve, then pull it out.

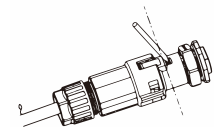


DC Wiring

- Turn off the DC switch.
- Choose 12 AWG wire to connect the PV module.
- Trim 6mm of insulation from the wire end.




 - Separate the DC connector as below.



2. Inverter Installation


Please make sure the inverter will be installed with a proper distance as shown below.

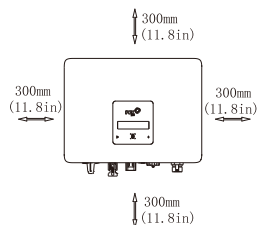


Position	Min Size
Left	300mm (11.8 in)
Right	300mm (11.8 in)
Top	300mm (11.8 in)
Bottom	300mm (11.8 in)
Front	300mm (11.8 in)

Step 1: Fix the bracket on the wall


Choose the place you want to install the inverter. Place the bracket on the wall and mark the position of the 3 holes from bracket.

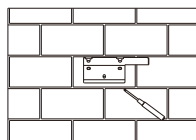

Drill holes with electric drill, make sure the holes are at least 50mm deep, and then tighten the expansion tubes.

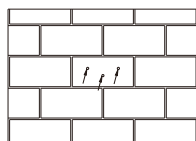


Insert the expansion tubes into the holes and tighten them. Install the bracket with the expansion screws.

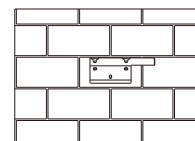

Step 2: Match the inverter with wall bracket

Hang the inverter over the bracket, slightly lower the inverter, and make sure the two mounting grooves on the back are properly fixed with the two bracket bars.

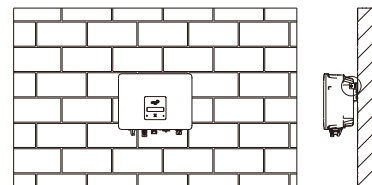

3. Wiring Steps


AC Wiring

Cable dimensions

Model (kW)	0.7	1.0	1.5	2.0	2.5	3.0	3.3
Cable	2.5mm ²	2.5mm ²	2.5mm ²	4mm ²	4mm ²	4mm ²	4mm ²
Micro-Breaker	16A	16A	16A	25A	25A	25A	25A

Grounding Wiring

Screw the ground screw with screwdriver as shown below.

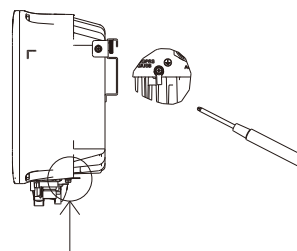

4. Startup Procedure

- After checking all connections are correct, turn on the external DC / AC breakers.
 - Turn the DC switch to "ON" position.
 - Inverter will start automatically when PV panels generate enough energy, the LED will be green.
 - Complete inverter Start-up guide
- After the initial start-up the inverter, display will go to the language settings page, short press to switch language and long press to confirm selection. Once language set, display will guide to set the safety regulation. Short press to switch safety regulation, and long press to confirm selection.

 
- Trim all the wires to 52.5mm and the PE wire to 55mm.
 - Use the crimping pliers to trim 12mm of insulation from all wire ends as shown in the picture.
-
- Outer jacket
- L: Brown/Red Wire
 - N: Blue/Black Wire
 - PE: Yellow & Green Wire

Note: Please refer to local cable type and color for actual installation.


- Separate the AC plug into three parts as below.
- Hold the middle part of the female insert, rotate the back shell to loosen it, and detach it from female inset.
- Remove the cable nut (with rubber insert) from the back shell.



- Slide the cable nut, then the back shell onto the cable.



 - Push the threaded sleeve into the socket, tighten up the cap on the terminal.



Note:

- When starting the inverter for the first time, the country code will be set by default to the local settings. Please check if the country code is correct.
- Set the time on the inverter using the button or by using the APP.

Please scan the QR Code and follow the steps below to download our latest multi-language User Manual/Quick Installation Guide:
Scan the QR Code → Select your Language → Choose to download User Manual or Quick Installation Guide → Download

